

## IRC916E / IRC412 Code Reset Procedure

**Problem:** A consumer has locked the unit and the code is unknown.

**Solution:**

1. Open the door with the by-pass key and leave in the unlocked position.
2. Remove any battery and press two or three keypad numbers to drain any leftover power. Pressing the first number may result in a click sound. Pressing a second number should not emit any sound. This means the system has reset.
3. Replace the batteries. The screen will display "SECURE". While the door is still in the unlocked position, enter 1, 2, 3, 4, #.  
The screen will display "CLOSED" and the locking bolts will extend.  
Now remove the by-pass key.
4. Next, enter 1, 2, 3, 4, #. The screen will display "OPEN" and the door bolts will retract.  
The code has now been cleared and will accept any code to lock.